

Saturn Powertrain Actuators

1-2 Shift Solenoid	CCP Vent	Engine Indicator Lamp
2-3 Shift Solenoid	Class 2 Learned Source Identifiers Reset	Engine Speed Control
2nd Actuator Disable	Clutch Pedal Fully Applied Position Learn	Engine Sync Mode
2nd Actuator Manual Control	Clutch Sol 1 Electrical	Engine Sync Source
2nd Clutch Audible Actuator	Clutch Sol 1 Functional	ESC Init
3-2 Shift Sol Duty Cycle	Clutch Sol 2 Electrical	ETC Inhibitor
3rd Actuator Disable	Clutch Sol 2 Functional	ETC Parameters
3rd Clutch Audible Actuator	CMP Actuator Sol	ETC Throttle Actuator
4th Actuator Disable	Command Gear Select	ETC Throttle Position
4th Clutch Audible Actuator	Commanded Air/Fuel Rate	EV Fan PWM Cntl
A/C Clutch	Commanded Gear	EVAP Canister Purge Sol
A/C Relay	Compression Test	EVAP Canister Vent Valve
Air Conditioning Clutch	Constrain Battery Power Limits	Evap Purge Solenoid
Air Conditioning Compressor Clutch	Coolant Gauge Position	EVAP Purge Solenoid (PWM)
Air Pump	Cooling Fan Relay 1	EVAP Service Bay Test
AIR Pump Service Bay Test	Cooling Fan Relay 2	EVAP Service Test Trigger
AIR Relay	Cooling Fan Relay 3	EVAP System Seal
Air Solenoid Relay	Cooling Fan Relay High	EVAP Vent Solenoid
Alternator Lterm	Cooling Fan Relay Low	EVO Position
Alternator L-Terminal	Cooling Fan Speed	Exh Cam Phase Bk 1 Crank Angle
APP Learn	Crank Decode Mode	Exh Cam Phase Solenoid Bank 1
ATF High Temp Indicator	Crank Learn Test	Exhaust Cam Phase
Auxiliary Coolant Pump Relay	Crankshaft Pos Var Learn	Exhaust Cam Phase Angle Bank 1
Auxiliary Cooling Fan	Crankshaft Position Variation Learn Trigg	Exhaust Cam Phase Angle Bank 2
Auxiliary Transmission Pump	Cruise	Exhaust Cam Phase Solenoid Bank 1
Auxiliary Transmission Pump Fluid Supply	Cruise Clutch	Exhaust Cam Phase Solenoid Bank 2
Auxiliary Transmission Pump Fluid Supply	Cruise Motor Move	Exhaust Gas Recirculation Pintle Lift
Auxiliary Transmission Pump Fluid Supply	Cruise Motor Pulse Time	Fan 1
Auxiliary Transmission Pump Relay	Cylinder Balance Test	Fan 2
Auxiliary Transmission Pump Speed	Cylinder Deactivation 1	Fan Control 1
AWD Solenoid	Cylinder Deactivation 2	Fan Control 2
Blended Regenerative Braking Control	Cylinder Deactivation 3	Fan Relay
BLM Learn	Cylinder Deactivation 4	Fan Relay 1
Boost Duty Cycle	Desired Engine Oil Life	Fan Relay 2
Boost Solenoid	Desired Fuel Rail Pressure	Fan Relay 3
Brake Boost Pump Control	Desired Idle Speed Control	Fans High Speed
Brake Fluid Pressure Hold Solenoid 1 Con	Disable All Fuel Injector	Fans Low Speed
Brake Fluid Pressure Hold Solenoid 2 Con	Disable Gear and TCC Diag	Field Coil Circuit
Cam Decode Mode	Disable Idle Spark	Force Autostop/Start
Canister Purge	Disable Traction Control	Forced Idle
Canister Purge Duty Cycle	Economy (ECO) Telltale	Front O2 Heater
Canister Purge Solenoid	EGR Position	Fuel Closed Loop
Canister Vent	EGR Sol Duty Cycle	Fuel Comp Reset Trigger
Canister Vent Solenoid	EGR Solenoid	Fuel Composition Reset
CASE Learn	EGR Solenoid (PWM)	Fuel Gauge Position
CASE Learn Crank	Electronic Throttle Control Snapshot Trig	Fuel Injector #1 Flow Test
Catalyst Service Test Trigger	Electronic Throttle Control Validation Par	Fuel Injector #2 Flow Test
CCP Duty Cycle	Enable DVT Factory Test Mode	Fuel Injector #3 Flow Test
CCP Purge	Enable DVT Mode	Fuel Injector #4 Flow Test
	Enable Misfire diagnosis	Fuel Injector #5 Flow Test

Fuel Injector #6 Flow Test	IAC Steps	Malfunction Indicator Lamp
Fuel Injector Balance	idle (dynamic) spark	MIL
Fuel Injector Test #1	Idle Adapts Reset Trigger	Minimum Allowed SOC Override
Fuel Injector Test #2	Idle Engine Speed	MLP Audible Actuator
Fuel Injector Test #3	Idle Engine Speed Enable	Motor A Isolation Test Mode
Fuel Injector Test #4	Idle Spark	Motor B Isolation Test Mode
Fuel Injector Test #5	Idle Speed Command	NERMIL Service Lamp
Fuel Injector Test #6	Ignition Coil Cyl. 1	O2 Front Heater
Fuel Level Lamp	Ignition Coil Cyl. 2	O2 Rear Heater
Fuel Mode	Ignition Coil Cyl. 3	O2S Heater Bn1 Sen 1
Fuel Pump	Ignition Coil Cyl. 4	O2S Heater Bn1 Sen 2
Fuel Pump Closed-Loop Correction Reset	Ignition Coil Cyl. 5	O2S Heater Bn2 Sen 1
Fuel Pump Duty Cycle	Ignition Coil Cyl. 6	O2S Heater Resistance Reset Trigger
Fuel Pump Relay	Ignition Coil Identifier	Overtemp Lamp
Fuel Pump Relay #1	Ignition Coil Test #1	Oxygen Sensor Heater Bank 1 Sensor 1 D
Fuel Pump Relay #2	Ignition Coil Test #2	Oxygen Sensor Heater Bank 1 Sensor 2 D
Fuel Trim	Ignition Coil Test #3	Oxygen Sensor Heater Bank 2 Sensor 1 D
Fuel Trim Enable	Ignition Coil Test #4	Oxygen Sensor Heater Bank 2 Sensor 2 D
Fuel Trim Learn	Ignition Coil Test #5	Oxygen Sensor Heater Resistance Reset T
Fuel Trim Reset	Ignition Coil Test #6	Oxygen Sensor Heater Sensor 1 Duty Cycl
Fuel Trim Reset Trigger	IMT Valve	Oxygen Sensor Heater Sensor 2 Duty Cycl
Fueling Mode	Injector Flow Test	PC Solenoid
Gear Command	Injector Mode	PC Solenoid 177
Generator L Terminal	Injector Off Enable	PCS Duty Cycle
Generator L-Terminal	Injector Pulse Enable	Powertrain Relay
Heater Core Pump	Int Cam Phase Bk 1 Crank Angle	Purge Solenoid
High Speed Cooling Fan	Int Cam Phase Sol Bank 1	Purge Solenoid #1
High Speed Fan	Intake Cam Phase Angle Bank 1	Purge Solenoid #2
High Voltage Crash Event Latch Reset Tri	Intake Cam Phase Angle Bank 2	QDM Quick Test
High Voltage Discharge Fault Latch Reset	Intake Cam Phase Solenoid Bank 1	Rear O2 Heater
HO2S 1 Heater	Intake Cam Phase Solenoid Bank 2	Regulation of Low Voltage
HO2S 2 Heater	Intake Manifold Runner Control	Remote Keyless Entry
HO2S Bank 1 Sensor 1 Heater	Intake Manifold Tuning Valve	Remote Vehicle Start Disable History Res
HO2S Bank 1 Sensor 2 Heater	Intake Plenum Switchover Valve	Reset IAC Motor Position
HO2S Bank 2 Sensor 1 Heater	Intake Plenum Switchover Vlv	Reset Learned Values
HO2S Bank 2 Sensor 2 Heater	Intake Rocker Arm Actuator Sol	Reset Trans Adapts
Hood Ajar TT Command	Intercooler Pump	Reset Trans Oil Life
HV Isolation Fault Diagnostic Device Cont	Intermediate Voltage	Reverse Inhibit
Hybrid Battery Contactor	Learned Airflow Adapts Reset Trigger	Sec Air Injection Reaction Pump
Hybrid Battery Fan PWM Device Control	Line Audible Actuator	Sec Air Injection Reaction Valve
Hybrid Battery Negative Contactor Devic	Line PC Sol Electrical	Sec Air Pump Relay
Hybrid Battery Positive Contactor Device	Line PC Sol Functional	Secondary A.I.R. Control
Hybrid Battery Pre Charge Contactor Dev	Line PC Solenoid	Secondary Air Injection Reaction Service
Hybrid Function Operation	Line Pressure Control Sol A	Secondary Air Injection Reaction System
Hybrid Transmission Commanded State	Line Pressure Control Sol B	Secondary Air Injection Reaction System
IAC Closed Loop	Line Pressure Control Sol C	Secondary Fuel Pump
IAC Control	Line Pressure Scan	Service Boost Mode
IAC Mode	Linear EGR	Service Vehicle Soon Lamp
IAC Position	Low Speed Cooling Fan	SGCM Coolant Pump
IAC Position Command	Low Speed Fan	Shift PC Sol Electrical
IAC Reset	Low Voltage Output Mode	Shift Sol #1 Electrical
IAC RPM	Low Voltage Output Setpoint	Shift Sol #2 Electrical

Shift Sol #3 Electrical	Transmission Adapts Reset Trigger
Shift Sol #4 Electrical	Transmission Cleaning Procedure Trigger
Shift Sol #5 Electrical	Transmission Clutch 1 Solenoid
Shift Solenoid 1	Transmission Clutch 2 Solenoid
Shift Solenoid 1-2	Transmission Clutch 3 Solenoid
Shift Solenoid 2	Transmission Clutch 4 Solenoid
Shift Solenoid 2-3 #1	Transmission Commanded Gear
Shift Solenoid 2-3 #2	Transmission Fast Learn Trigger
Shift Solenoid 3	Transmission High Side Driver 1
Shift Solenoid A	Transmission High Side Driver 2
Shift Solenoid B	Transmission Line Pressure (Lower Byte)
Shift Solenoid C	Transmission Line Pressure (Upper Byte)
Shift Trans Gear	Transmission Line Pressure Current
SIDI High Pressure Fuel Supply System Co	Transmission M2 Clutch / Reverse Multip
SIDI High Pressure Fuel Supply System Co	Transmission M3 Clutch Multiplex Soleno
SIDI High Pressure Fuel Supply System Co	Trigger CASE Learn
Skip Shift	Turbo Overrun Air Valve Control
Skip Shift Solenoid	Turbo Waste Gate Control
Spark Angle Freeze	Upshift Lamp
Spark Retard	Var Cam Phasor
Spark Retard Angle	Variable Intake Manifold Flap
Spark Retard Control	Vehicle Lift/Dive
Speedometer Gauge Position	Vent Solenoid
Starter Generator Crank	VTD Relearn
Starter Relay	VTEC Solenoid
Steering Assist Solenoid	Wide Open Throttle Self Test
Stepper Motor Ratio Control	
TAC Module Power Inhibit	
Tachometer Gauge Position	
TCC Actuator	
TCC Audible Actuator	
TCC Command	
TCC Control Solenoid	
TCC Engage Control	
TCC PC Sol Electrical	
TCC PC Sol Functional	
TCC PWM Solenoid	
TCC Solenoid	
TCC Solenoid Electrical	
TCC Solenoid Functional	
Theft Deterrent Relearn	
Throttle Actuator Control	
Throttle Body Relearn Trigger	
Throttle Position	
Throttle Position Valve	
Torque Converter Clutch	
Torque Converter Clutch System	
Torque Convertor Clutch System	
Torque Reduction Bypass	
Trans Adapts Reset Trigger	
Trans. Oil Pump Control	
Transmission Adapts Preset Trigger	

Saturn Body Actuators

1st	Air Bag Lamp #3	Antenna 1 #4
1st #1	Air Down Solenoid	Antenna 2
1st #2	Air Inlet Door	Antenna 2 #1
1st #3	Air Inlet Door Position	Antenna 2 #2
1st #4	Air Inlet Door Position #1	Antenna 2 #3
2nd	Air Inlet Door Position #2	Antenna 2 #4
2nd #1	Air Inlet Door Position #3	Antenna 3
2nd #2	Air Inlet Door Position #4	Antenna 3 #1
2nd #3	Air Mix Door	Antenna 3 #2
2nd #4	Air Temperature	Antenna 3 #3
3rd	Air Up Solenoid	Antenna 3 #4
3rd #1	Alarm Warning	Antenna 4
3rd #2	Alarm Warning #1	Antenna 4 #1
3rd #3	Alarm Warning #2	Antenna 4 #2
3rd #4	ALC Compressor Relay	Antenna 4 #3
4WD Indicator	ALC Compressor Relay #1	Antenna 4 #4
A/C LED	ALC Compressor Relay #2	Audio Mute
A/C Request	ALC Compressor Relay #3	Auto Headlamp Control
ABS Lamp	ALC Exhaust Solenoid	Auto Parklamp Control
ABS Lamp #1	ALC Exhaust Solenoid #1	Aux. Blower Motor PWM
ABS Lamp #2	ALC Exhaust Solenoid #2	Aux. Mode Door Position
ABS Lamp #3	ALC Exhaust Solenoid #3	Aux. Temp. Door Position
ABS Lamp #4	ALC Headlamp Relay	Auxiliary Air Temp. Door
ABS Lamp #5	ALC Headlamp Relay Test	Auxiliary Blower Motor
ABS Lamp #6	ALC Headlamps	Auxiliary Blower Motor PWM
AC Clutch	ALC Headlamps #1	Auxiliary Heater Test
AC Defrost Solenoid	ALC Headlamps #2	Auxiliary Lamp
AC Led	ALC Parking Lamps	Auxiliary Mix Door
AC Led #1	ALC Parking Lamps #1	Auxiliary Mode Door
AC Led #2	ALC Parking Lamps #2	B+Pack Primary Valve Test
AC Mix Door	ALC Parklamp Relay	B+Pack Secondary Valve Test
AC Orifice Relay	ALC Parklamp Relay Test	Backup Lamp
AC Permission	All Doors Lock	Backup Lamps
AC Request	All Doors Lock Test	Backup Lamps #1
AC Request #1	All Doors Unlock	Backup Lamps #2
AC Request #2	All Gauge Sweep Test	Backup Lamps #3
Access Relay	All On	Backup Lamps #4
Accessory Relay	All Status LEDs	Backup Lamps #5
Accessory Relay Test	Alternator Lamp Test	Backup Lamps #6
Accy/RAP Relay	AM Icon	Backup Lamps Test
Accy/RAP Relay Test	AM Icon #1	Balance Test
Add/Replace Key Fobs	AM Icon #2	Balance Test #1
Adjustable Pedal Calibration	AM Icon #3	Balance Test #2
Adjustable Pedal Inhibit Test	Ambient Light Sensor	Balance Test #3
AF Switching	Ambient Temperature	Balance Test #4
Afterblow Relay	Antenna	Balance Test #5
Afterblow Relay Test	Antenna 1	Balance Test #6
Afterblow Test	Antenna 1 #1	Battery
Air Bag Lamp #1	Antenna 1 #2	Battery Life Lamp
Air Bag Lamp #2	Antenna 1 #3	Belt Tower Up/Down

Belt Towerand Headrest Up/Down	Check Gauges Lamp	Console Switch Lamp
Blower Motor	Check Gauges Lamp #1	Console Switch Lamp #1
Blower Motor #1	Check Gauges Lamp #2	Console Switch Lamp #2
Blower Motor #2	Check Gauges Lamp #3	Console Switch Lamp #3
Blower Motor #3	Check Gauges Lamp #4	Console Switch Lamp #4
Blower Motor #4	Check Gauges Lamp #5	Console Switch Lamp #5
Blower Motor #5	Check Gauges Lamp #6	Console Switch Lamp #6
Blower Motor #6	Chime	Control Power
Blower Motor Speed	Chime #1	Control Power #1
Blower Motor Test	Chime #2	Control Power #2
BLR Control (Stop Lamp)	Chime 1	Control Power #3
BLR_Control (Stop Lamp)	Chime 2	Control Power #4
BPP Sensor Calibration	Chime Fast	Control Rear Display Outputs
Brake Lamp	Chime Fast #1	Coolant Gage
Brake Lamp #1	Chime Fast #2	Coolant Gauge Sweep
Brake Lamp #2	Chime Fast #3	Coolant Gauge Sweep #1
Brake Lamp #3	Chime Fast #4	Coolant Gauge Sweep #2
Brake Lamp #4	Chime Fast #5	Coolant Gauge Sweep #3
Brake Lamp #5	Chime Fast #6	Coolant Gauge Sweep #4
Brake Lamp #6	Chime Medium	Coolant Gauge Sweep Test
Brake to Shift Control	Chime Medium #1	Coolant Gauge Sweep Test #1
Brake to Shift Control #1	Chime Medium #2	Coolant Gauge Sweep Test #2
Brake to Shift Control #2	Chime Medium #3	Coolant Gauge Sweep Test #3
Brake to Shift Control #3	Chime Medium #4	Coolant Gauge Sweep Test #4
Brake to Shift Control #4	Chime Medium #5	Coolant Gauge Sweep Test #5
Brake to Shift Control Test	Chime Medium #6	Coolant Gauge Sweep Test #6
Brake to Shift Relay	Chime Slow	Coolant Temp Gage
Brake to Shift Relay #1	Chime Slow #1	Courtesy Lamp
Brake to Shift Relay #2	Chime Slow #2	Courtesy Lamp 1, 2 w/dim
Brake to Shift Relay #3	Chime Slow #3	Courtesy Lamp 1, 2 w/dim #1
Brake to Shift Relay Test	Chime Slow #4	Courtesy Lamp 1, 2 w/dim #2
Brake to Shift Telltale	Chime Slow #5	Courtesy Lamp 1, 2 w/dim #3
BTSI	Chime Slow #6	Courtesy Lamp 1, 2 w/dim #4
Calibrate HVAC Module	Chime Test	Courtesy Lamp 1, 2 w/o dim
Cargo Door Unlock	Chime Tone 1	Courtesy Lamp 1, 2 w/o dim #1
Cargo Lamp On Indicator	Chime Tone 2	Courtesy Lamp 1, 2 w/o dim #2
Cassette Icon	Chime Tone 3	Courtesy Lamp 1, 2 w/o dim #3
Cassette Icon #1	Cigar Lighter	Courtesy Lamp 1, 2 w/o dim #4
Cassette Icon #2	Cigar Lighter #1	Courtesy Lamp Test
Cassette Icon #3	Cigar Lighter #2	Courtesy Lamps
CD Icon	Cigar Lighter #3	Courtesy Lamps #1
CD Icon #1	Cigar Lighter #4	Courtesy Lamps #2
CD Icon #2	Clear Alarm Information	Courtesy Lamps #3
CD Icon #3	CLEAR ALL CLASS 2 DEVICE CONTROL	Courtesy Lamps #4
Center Cricket	Clear Memory and Program All Fobs Test	Crank Relay
Center I/P Speaker	Cluster Dimming	Cruise Control
Center IP Mid Range	Column For/Rearwards	Cruise Lamp
Center Speaker	Column Up/Downwards	Cycle Speakers
Change Oil Lamp	configure the PAL Module with vehicle ra	Date LED
Charge Lamp	Console Door Position	Daytime Running Lamps
Charge LED	Console Shift BTSI Relay	Daytime Running Lamps #1
Check Eng Oil Lvl Indicator	Console Shift BTSI Relay Test	Daytime Running Lamps #2

Daytime Running Lamps #3	DR Door Lock/Unlock	Driver Mirror Left #2
Daytime Running Lamps #4	DR Door Lock/Unlock #1	Driver Mirror Left #3
Daytime Running Lamps Test	DR Door Lock/Unlock #2	Driver Mirror Right
Daytime Running Lights	DR Door Lock/Unlock #3	Driver Mirror Right #1
Defogger (60 s)	Dr. Door Unlock (pulse 500 ms)	Driver Mirror Right #2
Defrost Door	Dr. Heated Seat Request	Driver Mirror Right #3
Defrost Heater Door	Drive	Driver Mirror Up
Defrost Mode	Drive #1	Driver Mirror Up #1
Deice Enable	Drive #2	Driver Mirror Up #2
De-Ice Enable Test	Drive #3	Driver Mirror Up #3
Delay Accessory Bus	Drive #4	Driver Mirror Vertical Motor
Delay Interior Lights	Driver Door Lock/Unlock	Driver Rear Heated Seat High
DIC All Segments Test	Driver Door Relay	Driver Rear Heated Seat Low
DIC Columns Segment Test	Driver Door Relay #1	Driver Temp Door Position
DIC Odometer	Driver Door Relay #2	Driver Temp Door Position #1
DIC Rows Segment Test	Driver Door Unlock	Driver Temp Door Position #2
Digital Radio Receiver	Driver Door Unlock #1	Driver Temp Door Position #3
Dimmable Telltale Intensity	Driver Door Unlock #2	Driver Temp Door Position #4
Dimmed Lights Duty Cycle (Park Lamps A	Driver Door Unlock #3	Driver Temp. Door
Dimming	Driver Door Unlock #4	Driver Window
Dimming Intensity	Driver Door Unlock Test	Driver Window #1
Disable XM Network	Driver Heated Mirror	Driver Window #2
Display Backlight Level	Driver Heated Mirror #1	Driver Window #3
Display Check	Driver Heated Mirror #2	Driver Window #4
Display Test	Driver Heated Mirror #3	Driver Window #5
Display(s) Test	Driver Heated Seat	Driver Window #6
Display(s) Test #1	Driver Heated Seat #1	Driver Window Motor
Display(s) Test #2	Driver Heated Seat #2	DRL
Display(s) Test #3	Driver Heated Seat #3	DRL Headlamps
Display(s) Test #4	Driver Heated Seat #4	DRL Headlamps #1
Dolby	Driver Heated Seat High	DRL Headlamps #2
Door Backlight Test	Driver Heated Seat High #1	DRL Headlamps #3
Door Backlight Test #1	Driver Heated Seat High #2	DRL Headlamps #4
Door Backlight Test #2	Driver Heated Seat LED	DRL Headlamps #5
Door Backlight Test #3	Driver Heated Seat Low	DRL Headlamps #6
Door Backlight Test #4	Driver Heated Seat Low #1	DRL Parklamps
Door Backlight Test #5	Driver Heated Seat Low #2	DRL Parklamps #1
Door Backlight Test #6	Driver Heated Seat Test	DRL Parklamps #2
Door Lock	Driver Lock	DRL Parklamps #3
Door Lock #1	Driver Lock #1	DRL Parklamps #4
Door Lock #2	Driver Lock #2	DRL Parklamps #5
Door Lock (pulse 500 ms)	Driver Lock #3	DRL Parklamps #6
Door Lock On/Off	Driver Lock #4	DRL Test
Door Lock/Unlock	Driver Lock #5	Drop Endgate
Door Lock/Unlock #1	Driver Lock #6	Drvr Horizontal Motor Cmd
Door Lock/Unlock #2	Driver Mirror Down	Drvr Mirror Horiz Motor
Door Lock/Unlock #3	Driver Mirror Down #1	Drvr Rear Vert Motor Cmd
Door Lock/Unlock #4	Driver Mirror Down #2	Drvr Recline Motor Command
Door Unlock	Driver Mirror Down #3	Economy LED
Door Unlock #1	Driver Mirror Fold	Electric Adjustable Pedal
Door Unlock #2	Driver Mirror Left	Enable Detect of XM Presence on each st
Door Unlock (pulse 500 ms)	Driver Mirror Left #1	Engine Hot Lamp

Engine Hot Lamp #1
Engine Hot Lamp #2
Engine Hot Lamp #3
Engine Hot Lamp #4
English Metric Status
English Metric Status #1
English Metric Status #2
English Metric Status #3
Exit 1
Exit 1 #1
Exit 1 #2
Exit 1 #3
Exit 1 #4
Exit 2
Exit 2 #1
Exit 2 #2
Exit 2 #3
Exit 2 #4
Exterior Lamps
Exterior Lamps #1
Exterior Lamps #2
Fade Test #1
Fade Test #2
Fade Test #3
Fade Test #4
Fade Test #5
Fade Test #6
Fan
Fan High
Fan Low
Fan Medium
Fan Medium High
Fan Speed (PWM)
Fan Speed(PWM)
FM Icon
FM Icon #1
FM Icon #2
FM Icon #3
Fog Lamps
Fog Lamps #1
Fog Lamps #2
Fog Lamps #3
Fog Lamps #4
Fog Lamps Telltale
Fog Lamps Telltale #1
Fog Lamps Telltale #2
Fog Lamps Telltale #3
Fog Lamps Telltale #4
Fog Lamps Telltale #5
Fog Lamps Telltale #6
Fog Lamps Test
Folding Top

Folding Top #1
Folding Top #2
Fright Front Tweeter
Front Blower Motor PWM
Front Courtesy Lamp
Front Down
Front Down #1
Front Down #2
Front Down #3
Front Down #4
Front Down #5
Front Down #6
Front Down and Seat Back
Front Down and Seat Reverse
Front Fog Lamp
Front Fog Lamps
Front Fog Lamps #1
Front Fog Lamps #2
Front Fog Lamps #3
Front Fog Lamps #4
Front Fog Lamps #5
Front Fog Lamps #6
Front Psgr Window Motor
Front Up
Front Up #1
Front Up #2
Front Up #3
Front Up #4
Front Up #5
Front Up #6
Front Up and Seat Forward
Front Up/Down
Front Up/Down #1
Front Up/Down #2
Front Up/Down #3
Front Up/Down #4
Front Window Motor
Front Wiper Interm 1
Front Wiper Interm 2
Front Wiper Interm 3
Front Wiper Interm 4
Front Wiper Interm 5
Front Wiper Low Speed
Front Wiper Relay
Front Wiper Relay Test
Fuel Bars Segment Test
Fuel Button
Fuel Door Lock Relay
Fuel Door Lock Relay #1
Fuel Door Lock Relay #2
Fuel Door Lock Relay #3
Fuel Door Release

Fuel Door Release Relay
Fuel Door Unlock Relay
Fuel Door Unlock Relay #1
Fuel Door Unlock Relay #2
Fuel Door Unlock Relay #3
Fuel Gage
Fuel Gage Sweep Test
Fuel Gauge Sweep
Fuel Gauge Sweep #1
Fuel Gauge Sweep #2
Fuel Gauge Sweep #3
Fuel Gauge Sweep #4
Fuel Gauge Sweep Test
Fuel Gauge Sweep Test #1
Fuel Gauge Sweep Test #2
Fuel Gauge Sweep Test #3
Fuel Gauge Sweep Test #4
Fuel Gauge Sweep Test #5
Fuel Gauge Sweep Test #6
Fuel LED
Gage Filtering
Gauge Button
Gauge LED
Gauges
Gear Indicator Lamp
Gear Indicator Lamp #1
Gear Indicator Lamp #2
Gear Indicator Lamp #3
Gear Indicator Lamp #4
Gear Indicator Lamp #5
Gear Indicator Lamp #6
Graphics Intensity
Green LED
Green LED #1
Green LED #2
Green LED #3
Green LED #4
Hatch Release
Hatch Release #1
Hatch Release #2
Hatch Release #3
Hatch Release #4
Hatch Release #5
Hatch Release #6
Hdlmp
Head Lamps Require Telltale
Header Latch
Headlamp Washer Relay
Headlamp Washer Test
Headlamps
Headlamps #1
Headlamps #2

Headlamps #3	Horn #3	Incandescent Dimming #2
Headlamps #4	Horn #4	Incandescent Dimming #3
Headlamps On Indicator	Horn #5	Incandescent Dimming #4
Headlamps Test	Horn #6	Incandescent Dimming 1
Headrest Up/Down	Horn Relay	Incandescent Dimming 2
Heated Seat	Horn Relay #1	Incandescent Dimming Test
Heated Seat Inhibit	Horn Relay #2	Indicator Test
Heated Seat Inhibit #1	Horn Relay #3	Indicator Test #1
Heated Seat Inhibit #2	Horn Relay #4	Indicator Test #2
Heated Seat Inhibit #3	Horn Relay Test	Initiate Onstar Phone Call (Blue Button)
Heated Seat LEDs	Horn Signal Time Length	Inside Air Temp Sensor Fan
Heated Seat Mode	Horn Test	Inside Air Temperature Fan
Heated Seat Temp	Htr./Def./A/C Door Position	Instant OAT Update
Heated Seats	Htr./Def./A/C Door Position #1	Instant OAT Update #1
Heated Seats Inhibit	Htr./Def./A/C Door Position #2	Instant OAT Update #2
Heated Seats Load Shed 1	Htr./Def./A/C Door Position #3	Instant OAT Update #3
Heated Seats Load Shed 1 #1	Htr./Def./A/C Door Position #4	Instant Outside Air Temperature Update
Heated Seats Load Shed 1 #2	HVAC Actuator Recal	Instrument Backlight Dimming
Heated Seats Load Shed 1 #3	HVAC Blower	Instrumentation Backlight Dimming
Heated Seats Load Shed 2	HVAC Blower Motor Speed	Int Lights
Heated Seats Load Shed 2 #1	HVAC Lamp	Integrated Sw. Backlighting Test
Heated Seats Load Shed 2 #2	HVAC Lamp #1	Interior Dimming
Heated Seats Load Shed 2 #3	HVAC Lamp #2	Interior Dimming Test
Heater Mode	HVAC Lamp #3	Interior Lamp Relay
Hi Beam	HVAC Lamp #4	Interior Lamps
High Beam Flashto Pass	HVAC Lamp #5	Interior Lamps #1
High Beam Flashto Pass #1	HVAC Lamp #6	Interior Lamps #2
High Beam Flashto Pass #2	I/P Illumination Lamps	Interior Lamps Test
High Beam Flashto Pass #3	I/P Illumination Lamps Test	Interior Temp Sensor
High Beam Flashto Pass #4	Ignition Power Relay	Intrusion Sensor
High Beam Lamp	Ignition Power Relay Test	Intrusion Sensor #1
High Beam Lamp #1	Ignition Run Relay	Intrusion Sensor #2
High Beam Lamp #2	Ignition Run Relay Test	Intrusion Sensor #3
High Beam Lamp #3	Ignition Voltage	Intrusion Sensor #4
High Beam Lamp #4	Inadv Power	IP Illumination Lamp
High Beam Relay	Inadvertent Power	IP Illumination Lamps
High Beam Relay #1	Inadvertent Power #1	IPC Gauge Sweep Test
High Beam Relay #2	Inadvertent Power #2	IR Switched Power
High Beam Relay #3	Inadvertent Power #3	Key Light (Halo)
High Beam Relay Test	Inadvertent Power #4	Key Light (Halo) #1
High Beams	Inadvertent Power #5	Key Light (Halo) #2
High Beams Test	Inadvertent Power #6	Key Light (Halo) #3
High Blower Relay	Inadvertent Power Relay	Key Minder
High Low Beam Relay	Inadvertent Power Relay #1	Key Minder Test
High Low Beam Relay #1	Inadvertent Power Relay #2	Keypad LED Green
High Low Beam Relay #2	Inadvertent Power Relay #3	Keypad LED Red
High Low Beam Relay #3	Inadvertent Power Relay #4	Kmh Lamp
High Low Beam Relay #4	Inadvertent Power Test	Kmh Lamp #1
Horizontal Motor	Incand. Dim 1	Kmh Lamp #2
Horn	Incand. Dim 2	Kmh Lamp #3
Horn #1	Incandescent Dimming	Kmh Lamp #4
Horn #2	Incandescent Dimming #1	Kmh Lamp #5

Kmh Lamp #6	Left Rear Speaker #1	Lights on Minder Test
Lamp and Gauge Check	Left Rear Speaker #2	Load Management
Lamp Test	Left Rear Speaker #3	Lock All Doors Test
LCD Display	Left Rear Subwoofer	Lock All Doors
LCD Intensity	Left Rear Surround	Lock All Doors #1
LCD Intensity #1	Left Rear Turn Signal	Lock All Doors #2
LCD Intensity #2	Left Rear Tweeter	Lock All Doors #3
LCD Intensity #3	Left Rear Twiddler	Lock All Doors #4
LCD Intensity #4	Left Rear Window	Lock All Doors Test
Learn Column Soft Stop Position	Left Rear Window #1	Lock Rear Doors
LED Dimming	Left Rear Window #2	Lock Rear Doors Test
LED Dimming #1	Left Rear Window #3	Lock/Unlock
LED Dimming #2	Left Rear Window Test	Low Beam DRL
LED Dimming Test	Left Side Front Access Panel	Low Beam Relay
LED Intensity	Left Side Rear Access Panel	Low Beam Relay #1
LED Intensity #1	Left Temp Door Position	Low Beam Relay #2
LED Intensity #2	Left Temp Door Position #1	Low Beam Relay #3
LED Intensity #3	Left Temp Door Position #2	Low Beam Relay Test
LED Intensity #4	Left Temp Door Position #3	Low Beam/DRL Test
Left Cornering Lamp	Left Temp. Door Position	Low Beams
Left Cornering Lamp Test	Left Turn Signal Lamp	Low Beams Test
Left Front Cricket	Left Turn Signal Lamp #1	Low Coolant
Left Front Door Speaker	Left Turn Signal Lamp #2	Low Fuel
Left Front Full Range	Left Turn Signal Lamp #3	Low Fuel Lamp
Left Front Midrange	Left Turn Signal Lamp #4	Low Fuel Lamp #1
Left Front Speaker	Left Turn Signal Lamp #5	Low Fuel Lamp #2
Left Front Speaker #1	Left Turn Signal Lamp #6	Low Fuel Lamp #3
Left Front Speaker #2	LF IP Speaker	Low Fuel Lamp #4
Left Front Speaker #3	LF Speaker Test	Low High Beam Output
Left Front Turn Signal	LF Subwoofer Speaker	Low I/P Courtesy Lamp
Left Front Tweeter	LF Turn Lamp DRL	Low I/P Courtesy Lamp #1
Left Front Woofer	LF Turn Lamp/DRL	Low I/P Courtesy Lamp #2
Left Mix Motor	LF Turn Lamp/DRL Test	Low I/P Courtesy Lamp #3
Left Mix Motor #1	LF Turn Signal	Low I/P Courtesy Lamp #4
Left Mix Motor #2	LF Turn Signal Test	Low I/P Courtesy Lamp #5
Left Mix Motor #3	LF Tweeter Door	Low I/P Courtesy Lamp #6
Left Mix Motor #4	Lift Gate Lock/Unlock	Low Washer Fluid
Left Mix Motor #5	Lift Glass Release	Lower Motor
Left Mix Motor #6	Lift Glass Release #1	LR Full Range
Left Rear Door Lock/Unlock	Lift Glass Release #2	LR Seat Speaker
Left Rear Door Lock/Unlock #1	Lift Glass Release #3	LR Speaker Test
Left Rear Door Lock/Unlock #2	Lift Glass Release #4	LR Stop Turn Signal Lamp
Left Rear Door Lock/Unlock #3	Liftgate	LR Stop/Turn Signal Lamp
Left Rear Door Speaker	Liftgate Lock	LR Stop/Turn Signal Lamp Test
Left Rear D-Pillar Speaker	Liftglass Release	LR Turn Signal
Left Rear Full Range	Liftglass Release Test	LR Turn Signal Test
Left Rear Lock	Lighting for Theft	Lumbar Down and Lumbar Back
Left Rear Lock #1	Lighting for Theft #1	Lumbar Forward
Left Rear Lock #2	Lighting for Theft #2	Lumbar Forward/Rearward
Left Rear Lock #3	Lighting for Theft #3	Lumbar Forward/Rearward #1
Left Rear Midrange	Lighting for Theft #4	Lumbar Forward/Rearward #2
Left Rear Speaker	Lights On Minder	Lumbar Forward/Rearward #3

Lumbar Forward/Rearward #4	Mirror Heat	Mode 1 Door Position
Lumbar Up	Mirror Heat #1	Mode 2 Door Position
Lumbar Up/Down	Mirror Heat #2	Mode Actuator
Lumbar Up/Down #1	Mirror Heat #3	Mode Door Position
Lumbar Up/Down #2	Mirror Heat #4	Mode Motor Position
Main Gage Tick marks	Mirror Heater	mph Lamp
Memory 1	Mirror Heater #1	mph Lamp #1
Memory 1 #1	Mirror Heater #2	mph Lamp #2
Memory 1 #2	Mirror Heater #3	mph Lamp #3
Memory 1 #3	Mirror Heater #4	mph Lamp #4
Memory 1 #4	Mirror Heater #5	mph Lamp #5
Memory 1 Indicator	Mirror Heater #6	mph Lamp #6
Memory 1 Indicator #1	Mirror Left	Neutral
Memory 1 Indicator #2	Mirror Left #1	Neutral #1
Memory 1 Indicator #3	Mirror Left #2	Neutral #2
Memory 1 Indicator #4	Mirror Left #3	Neutral #3
Memory 1 Indicator #5	Mirror Left #4	Neutral #4
Memory 1 Indicator #6	Mirror Left #5	Non-Integrated Backlighting Test
Memory 1 Recall	Mirror Left #6	Non-overhead Courtesy Lamp
Memory 2	Mirror Left/Right	Occupant Restraint
Memory 2 #1	Mirror Left/Right #1	Occupant Restraint Test
Memory 2 #2	Mirror Left/Right #2	Odometer Display
Memory 2 #3	Mirror Left/Right #3	Odometer Segment Test
Memory 2 #4	Mirror Left/Right #4	Oil Gauge Sweep Test
Memory 2 Indicator	Mirror Relearn	Oil Gauge Sweep Test #1
Memory 2 Indicator #1	Mirror Right	Oil Gauge Sweep Test #2
Memory 2 Indicator #2	Mirror Right #1	Oil Gauge Sweep Test #3
Memory 2 Indicator #3	Mirror Right #2	Oil Gauge Sweep Test #4
Memory 2 Indicator #4	Mirror Right #3	Oil Gauge Sweep Test #5
Memory 2 Indicator #5	Mirror Right #4	Oil Gauge Sweep Test #6
Memory 2 Indicator #6	Mirror Right #5	Oil LED
Memory 2 Recall	Mirror Right #6	Oil Level Lamp
Memory Exit 1 Recall	Mirror Up	Oil Life Reset
Memory Exit 2 Recall	Mirror Up #1	Oil Pressure Lamp
Mirror	Mirror Up #2	Oil Pressure Lamp #1
Mirror Curb View	Mirror Up #3	Oil Pressure Lamp #2
Mirror Curb View #1	Mirror Up #4	Oil Pressure Lamp #3
Mirror Curb View #2	Mirror Up #5	Oil Pressure Lamp #4
Mirror Curb View #3	Mirror Up #6	Open/Close Roof
Mirror Curb View #4	Mirror Up/Down	Options Button
Mirror Down	Mirror Up/Down #1	Outside Air Mode
Mirror Down #1	Mirror Up/Down #2	Overspeed Lamp
Mirror Down #2	Mirror Up/Down #3	Pack Volts Gauge Sweep Test
Mirror Down #3	Mirror Up/Down #4	Park
Mirror Down #4	Mix Actuator	Park #1
Mirror Down #5	Mix Door 1	Park #2
Mirror Down #6	Mix Door 2	Park #3
Mirror Fold	Mix Motor	Park #4
Mirror Fold #1	Mix Motor #1	Park Brake A
Mirror Fold #2	Mix Motor #2	Park Brake B
Mirror Fold #3	Mode	Park Brake Release
Mirror Fold #4	Mode Door	Park Key Lock Relay

Park Key Lock Relay #1	Passenger Heated Seat #4	Passenger Window #3
Park Key Lock Relay #2	Passenger Heated Seat High	Passenger Window #4
Park Key Lock Relay #3	Passenger Heated Seat High #1	Passenger Window #5
Park Key Lock Relay #4	Passenger Heated Seat High #2	Passenger Window #6
Park Lamp	Passenger Heated Seat LED	Passlock Power
Park Relay	Passenger Heated Seat Low	Passlock Power #1
Parking Lamps	Passenger Heated Seat Low #1	Passlock Power #2
Parking Lamps #1	Passenger Heated Seat Low #2	PBUS
Parking Lamps #2	Passenger Heated Seat Request	PBUS #1
Parking Lamps #3	Passenger Heated Seat Test	PBUS #2
Parking Lamps #4	Passenger Lock	Pedals For/Rearwards
Parking Lamps Relay	Passenger Lock #1	Pedals Forward/Rearward
Parking Lamps Relay #1	Passenger Lock #2	Perimeter Lighting
Parking Lamps Relay #2	Passenger Lock #3	Perimeter Lighting #1
Parking Lamps Relay #3	Passenger Lock #4	Perimeter Lighting #2
Parking Lamps Relay #4	Passenger Lock #5	Phone Call Test
Parking Lamps Test	Passenger Lock #6	Phone Call Test #1
PAS Disable History Buffer - Clear	Passenger Mirror Down	Phone Call Test #2
PAS Input – PA Switch	Passenger Mirror Down #1	Phone Call Test #3
PAS LED Output - PAS Switch LED	Passenger Mirror Down #2	Phone Call Test #4
PAS LED Output - Rear Red LED	Passenger Mirror Down #3	Pointer Intensity
PAS LED Output - Rear Yellow LED 1	Passenger Mirror Fold	Position Lamp Relay
PAS LED Output - Rear Yellow LED 2	Passenger Mirror Left	Power Control
PAS Output – Disable Feeds - LED Feed	Passenger Mirror Left #1	Power Down Now
PAS Output – Disable Feeds - Sensor Fee	Passenger Mirror Left #2	Power Down Now #1
PAS Test – LED Test	Passenger Mirror Left #3	Power Down Now #2
PAS Test – Sensor Test	Passenger Mirror Right	Power Down Now #3
Pass Door Lock/Unlock	Passenger Mirror Right #1	Power Down Now #4
Pass Door Lock/Unlock #1	Passenger Mirror Right #2	Power Moding
Pass Door Lock/Unlock #2	Passenger Mirror Right #3	Power Moding #1
Pass Door Lock/Unlock #3	Passenger Mirror Select LED	Power Moding #2
Pass Key	Passenger Mirror Select LED #1	Power Moding #3
Pass Rear Heated Seat High	Passenger Mirror Select LED #2	Power Moding #4
Pass Rear Heated Seat Low	Passenger Mirror Select LED #3	Power Sliding Door
Passenger Door(s) Unlock Test	Passenger Mirror Select LED #4	Power Use Gauge Sweep Test
Passenger Door Lock/Unlock	Passenger Mirror Select LED #5	Program All Key Fobs
Passenger Door Unlock	Passenger Mirror Select LED #6	Program Key Fobs
Passenger Door Unlock #1	Passenger Mirror Up	Program Key Fobs #1
Passenger Door Unlock #2	Passenger Mirror Up #1	Program Key Fobs #2
Passenger Door Unlock #3	Passenger Mirror Up #2	Program Key Fobs #3
Passenger Door Unlock #4	Passenger Mirror Up #3	Program Key Fobs #4
Passenger Door Unlock Test	Passenger Seat Belt Reminder LED	Psgr Mirror Horizontal Motor
Passenger Door(s) Unlock	Passenger Seat Belt Reminder LED Test	Psgr Mirror Vertical Motor
Passenger Door(s) Unlock Test	Passenger Seatbelt Indicator Output	Psgr Wdw Lockout Indicator
Passenger Heated Mirror	Passenger Temp Door Position	Psgr. Seat Belt Reminder LED
Passenger Heated Mirror #1	Passenger Temp Door Position #1	PSIR OFF Indicator Output
Passenger Heated Mirror #2	Passenger Temp Door Position #2	PSIR ON Indicator Output
Passenger Heated Mirror #3	Passenger Temp Door Position #3	PSIR PWM output
Passenger Heated Seat	Passenger Temp Door Position #4	Puddle Lamps
Passenger Heated Seat #1	Passenger Window	Puddle Lamps #1
Passenger Heated Seat #2	Passenger Window #1	Puddle Lamps #2
Passenger Heated Seat #3	Passenger Window #2	Puddle Lamps #3

Puddle Lamps #4
 Pump Motor Direction
 Radio
 RAP Relay
 RAP Relay #1
 RAP Relay #2
 RAP Relay #3
 RAP Relay #4
 Re Learn Control Panel Type
 Re Learn Control Panel Type #1
 Re Learn Control Panel Type #2
 Re Learn Control Panel Type #3
 Rear Blower Power Relay
 Rear Compartment Lid Release
 Rear Courtesy Lamp
 Rear Defog
 Rear Defog Load Shed 1
 Rear Defog Load Shed 1 #1
 Rear Defog Load Shed 1 #2
 Rear Defog Load Shed 1 #3
 Rear Defog Load Shed 1 #4
 Rear Defog Load Shed 2
 Rear Defog Load Shed 2 #1
 Rear Defog Load Shed 2 #2
 Rear Defog Load Shed 2 #3
 Rear Defog Load Shed 2 #4
 Rear Defog Relay
 Rear Defog Relay #1
 Rear Defog Relay #2
 Rear Defog Relay #3
 Rear Defog Relay #4
 Rear Defog Relay Test
 Rear Defog Request
 Rear Defogger
 Rear Defogger #1
 Rear Defogger #2
 Rear Defogger #3
 Rear Defogger #4
 Rear Defogger #5
 Rear Defogger #6
 Rear Defogger Relay
 Rear Defogger Relay Test
 Rear Defogger Test
 Rear Defrost
 Rear Defrost LED
 Rear Door Lock/Unlock
 Rear Down
 Rear Down #1
 Rear Down #2
 Rear Down #3
 Rear Down #4
 Rear Down #5

Rear Down #6
 Rear Down and Recline Back
 Rear Fog Lamp Relay
 Rear Fog Lamp Relay #1
 Rear Fog Lamp Relay #2
 Rear Fog Lamp Relay #3
 Rear Fog Lamp Relay #4
 Rear Fog Lamps
 Rear Fog Lamps #1
 Rear Fog Lamps #2
 Rear Fog Lamps #3
 Rear Fog Lamps #4
 Rear Fog Lamps #5
 Rear Fog Lamps #6
 Rear Fog Lamps Relay (X024 only)
 Rear Park Aid 1
 Rear Park Aid 2
 Rear Park Aid 3
 Rear Shelf Woofer
 Rear Subwoofer
 Rear Subwoofer Coil 1
 Rear Subwoofer Coil 2
 Rear Up
 Rear Up #1
 Rear Up #2
 Rear Up #3
 Rear Up #4
 Rear Up #5
 Rear Up #6
 Rear Up and Recline Forward
 Rear Up/Down
 Rear Up/Down #1
 Rear Up/Down #2
 Rear Up/Down #3
 Rear Up/Down #4
 Rear Wiper
 Rear Wiper Interval 1
 Rear Wiper Interval 2
 Rear Wiper Relay
 Rear Wiper Relay Test
 Recalibrate All Motors
 Recalibrate All Motors #1
 Recalibrate All Motors #2
 Recalibrate All Motors #3
 Recalibrate BASS
 Recalibrate_BASS
 Recalibration for Feedback Motors
 Recirculation Actuator
 Recirculation Door
 Recirculation Mode
 Recirculation Motor Position
 Recirculation Solenoid

Recline Backward
 Recline Forward
 Recline Forward/Rearward
 Recline Forward/Rearward #1
 Recline Forward/Rearward #2
 Recline Forward/Rearward #3
 Recline Forward/Rearward #4
 Recline Motor
 Red LED
 Red LED #1
 Red LED #2
 Red LED #3
 Red LED #4
 Reduced Engine Power
 Relearn Window Position
 Reset Button
 Retained Accessory Power
 Retained Accessory Power #1
 Retained Accessory Power #2
 Retained Accessory Power #3
 Retained Accessory Power #4
 Retained Accessory Power Test
 Reverse
 Reverse #1
 Reverse #2
 Reverse #3
 Reverse #4
 Reverse Lamp Relay
 Reverse Lamp Relay #1
 Reverse Lamp Relay #2
 Reverse Lamp Relay #3
 Reverse Lamp Relay #4
 Reverse Lockout
 Reverse Relay
 Reverse Valve Test
 RF IP Speaker
 RF Speaker Test
 RF Subwoofer Speaker
 RF Turn Lamp DRL
 RF Turn Lamp/DRL
 RF Turn Lamp/DRL Test
 RF Turn Signal
 RF Turn Signal Test
 RF Tweeter Door
 RFA Link Output
 RFA Link Output #1
 RFA Link Output #2
 RFA Link Output #3
 RFA Link Output Test
 Right Cornering Lamp
 Right Cornering Lamp Test
 Right Front Cricket

Right Front Door Speaker	Right Turn Signal Lamp #3	Second Head LED Driver
Right Front Full Range	Right Turn Signal Lamp #4	Secure Vehicle
Right Front Midrange	Right Turn Signal Lamp #5	Security Lamp
Right Front Speaker	Right Turn Signal Lamp #6	Security Lamp #1
Right Front Speaker #1	Roof System	Security Lamp #2
Right Front Speaker #2	Rotation Motor	Security Lamp #3
Right Front Speaker #3	RR Full Range	Security Lamp #4
Right Front Turn Signal	RR Seat Speaker	Security Lamp #5
Right Front Tweeter	RR Speaker Test	Security Lamp #6
Right Front Woofer	RR Stop Turn Signal Lamp	Security Lamp Test
Right Mix Motor	RR Stop/Turn Signal Lamp	Security LED
Right Mix Motor #1	RR Stop/Turn Signal Lamp Test	Security LED Test
Right Mix Motor #2	RR Turn Signal	Security Telltale
Right Mix Motor #3	RR Turn Signal Test	Security Telltale #1
Right Mix Motor #4	Run Relay	Security Telltale #2
Right Mix Motor #5	Run Relay Test	Segment / Telltale Check
Right Mix Motor #6	Run/Crank Relay	Segment Check
Right Rear Door Lock/Unlock	Run/Crank Relay Test	Segment/Telltale Check
Right Rear Door Lock/Unlock #1	Seat 1 Back For/Rearwards	Select Solenoid 1
Right Rear Door Lock/Unlock #2	Seat 1 Cushion Front Up/Downwards	Select Solenoid 1 #1
Right Rear Door Lock/Unlock #3	Seat 1 Cushion Rear Up/Downwards	Select Solenoid 1 #2
Right Rear Door Speaker	Seat 1 For/Rearwards	Select Solenoid 2
Right Rear D-Pillar Speaker	Seat 1 Lumbar For/Rearwards	Select Solenoid 2 #1
Right Rear Full Range	Seat 1 Lumbar Up/Downwards	Select Solenoid 2 #2
Right Rear Lock	Seat 2 Lumbar Up/Downwards	Select Solenoid 3
Right Rear Lock #1	Seat Belt Lamp	Select Solenoid 3 #1
Right Rear Lock #2	Seat Belt Lamp #1	Select Solenoid 3 #2
Right Rear Lock #3	Seat Belt Lamp #2	Select Solenoid 4
Right Rear Midrange	Seat Belt Lamp #3	Select Solenoid 4 #1
Right Rear Speaker	Seat Belt Lamp #4	Select Solenoid 4 #2
Right Rear Speaker #1	Seat Belt Telltale	Select Solenoid 5
Right Rear Speaker #2	Seat Blt Rem Pass Out	Select Solenoid 5 #1
Right Rear Speaker #3	Seat Forward	Select Solenoid 5 #2
Right Rear Subwoofer	Seat Forward #1	Service 4WD Lamp
Right Rear Surround	Seat Forward #2	Service 4WD Lamp #1
Right Rear Turn Signal	Seat Forward #3	Service 4WD Lamp #2
Right Rear Tweeter	Seat Forward #4	Service 4WD Lamp #3
Right Rear Twiddler	Seat Forward #5	Service 4WD Lamp #4
Right Rear Window	Seat Forward #6	Service Now Lamp
Right Rear Window #1	Seat Forward/Rearward	Service Throttle Soon
Right Rear Window #2	Seat Forward/Rearward #1	Shift Lock Solenoid
Right Rear Window #3	Seat Forward/Rearward #2	Shift Lock Solenoid Test
Right Rear Window Test	Seat Forward/Rearward #3	Sol 1 Defroster
Right Side Rear Access Panel	Seat Forward/Rearward #4	Sol 1 Defroster #1
Right Temp Door Position	Seat Reverse	Sol 1 Defroster #2
Right Temp Door Position #1	Seat Reverse #1	Sol 2 Heater
Right Temp Door Position #2	Seat Reverse #2	Sol 2 Heater #1
Right Temp Door Position #3	Seat Reverse #3	Sol 2 Heater #2
Right Temp. Door Position	Seat Reverse #4	Sol 3 Defrost Heater
Right Turn Signal Lamp	Seat Reverse #5	Sol 3 Defrost Heater #1
Right Turn Signal Lamp #1	Seat Reverse #6	Sol 3 Defrost Heater #2
Right Turn Signal Lamp #2	Seat_Blt_Rem_Pass_Out	Sol 4 Air Inlet

Sol 4 Air Inlet #1
Sol 4 Air Inlet #2
Sol 5 AC Mode
Sol 5 AC Mode #1
Sol 5 AC Mode #2
Source
Speed Gage Sweep Test
Speed Gauge Sweep Test
Speed Gauge Sweep Test #1
Speed Gauge Sweep Test #2
Speed Gauge Sweep Test #3
Speed Gauge Sweep Test #4
Speed Gauge Sweep Test #5
Speed Gauge Sweep Test #6
Speedometer
Speedometer Gauge
Speedometer Gauge Sweep
Speedometer Gauge Sweep #1
Speedometer Gauge Sweep #2
Speedometer Gauge Sweep #3
Speedometer Gauge Sweep #4
Speedometer Segment Test
St of Charge Gauge Sweep Tst
Starter Enable
Steering Column Lock
Steering Column Lock #1
Steering Column Lock #2
Steering Column Lock #3
Steering Column Lock #4
Steering Column Lock #5
Steering Column Lock #6
Step Dimmable Telltale Intensity
Subwoofer Test
Swing Endgate
Switch Backlight Level
Switch Dimming Feed
Switch Dimming Feed #1
Switch Dimming Feed #2
Switch Dimming Feed #3
Switch Dimming Feed #4
Switch Dimming Test
Switch Dimming Test #1
Switch Dimming Test #2
Switch Dimming Test #3
Switch Dimming Test #4
Switch Dimming Test #5
Switch Dimming Test #6
Tach Gauge Sweep Test
Tach Gauge Sweep Test #1
Tach Gauge Sweep Test #2
Tach Gauge Sweep Test #3
Tach Gauge Sweep Test #4

Tach Gauge Sweep Test #5
Tach Gauge Sweep Test #6
Tachometer
Tachometer Gage Sweep Test
Tachometer Gauge Sweep
Tachometer Gauge Sweep #1
Tachometer Gauge Sweep #2
Tachometer Gauge Sweep #3
Tachometer Gauge Sweep #4
Telescope In/Out
Telltals
Temp Door Mode Valve Test
Temp Door Position
Temp Door Position #1
Temp Door Position #2
Temp Door Position #3
Temp. Bars Segment Test
Temp. Door
Temp. Door Position
Temperature Lamp
Terminate Phone Call (DOT Button)
Theater Dimming 1
Theater Dimming 1 #1
Theater Dimming 1 #2
Theater Dimming 1 #3
Theater Dimming 1 #4
Theater Dimming 2
Theater Dimming 2 #1
Theater Dimming 2 #2
Theater Dimming 2 #3
Theater Dimming 2 #4
Tilt Up/Down
Tire Pressure Reset
Tone Enable 1Khz
Toneau Latch
Tonneau Release
Torso Motor Inward Outward
Traction Active Lamp
Traction Lamp
Traction Lamp #1
Traction Lamp #2
Traction Lamp #3
Traction Lamp #4
Traction Lamp #5
Traction Lamp #6
Traction Lamp Test
Traction Off Lamp
Traction Switch LED
Trans Fluid Hot
Trip Button
Trunk Lamp
Trunk Release

Trunk Release #1
Trunk Release #2
Trunk Release (pulse 500 ms)
Trunk Release Relay
Trunk Release Relay #1
Trunk Release Relay #2
Trunk Release Relay #3
Trunk Release Relay #4
Trunk Release Test
Twilight Telltale
Unlearn Column Soft Stop Position
Unlock All Doors
Unlock All Doors Test
Unlock Doors
Unlock Other Door(s)
Unlock Rear Doors
Unlock Rear Doors Test
Upper Motor
Upshift Lamp
Upshift Lamp #1
Upshift Lamp #2
Upshift Lamp #3
Upshift Lamp #4
Vacuum Solenoid 1
Vacuum Solenoid 2
Vacuum Solenoid 3
Vacuum Solenoid 4
Valve 1
Valve 2
Valve 3
Valve 4
Valve 5
Vent Mode
VF Dim
VF Dim #1
VF Dim #2
VF Dim #3
VF Display Intensity and PRNDL
Volts Gauge Sweep Test
Volts Gauge Sweep Test #1
Volts Gauge Sweep Test #2
Volts Gauge Sweep Test #3
Volts Gauge Sweep Test #4
Volts Gauge Sweep Test #5
Volts Gauge Sweep Test #6
Volts Lamp
Volts Lamp #1
Volts Lamp #2
Volts Lamp #3
Volts Lamp #4
Water Pump Control #1
Water Pump Control #2

Water Pump Control #3
Water Pump Control #4
Water Valve
Window Express Down
Window Express Down #1
Window Express Down #2
Window Express Down #3
Window Express Down #4
Window Peak Detect Discharge
Window Peak Detect Discharge #1
Window Peak Detect Discharge #2
Window Peak Detect Discharge #3
Window Peak Detect Discharge #4
Window Up/Down
Window Up/Down #1
Window Up/Down #2
Window Up/Down #3
Window Up/Down #4
Wiper High Speed Relay
Wiper High Speed Relay Test
Wiper Motor Delay Test
Wiper Motor Low/Hi Speed Relay
Wiper Motor Low/Hi Speed Relay Test
Wiper Motor Low/Hi Speed Rly
Wiper Motor Relay
Wiper Motor Relay Test
Wiper Relay
Wiper Relay Test
Wiper Washer Motor
Wiper Washer Motor Test

Saturn Chassis Actuators

(un)learn Steering Centered Position	EVO Solenoid Test	LF Wheel Complete
2 Wheel Steer Mode Lamp	Exhaust Brake Control	LFRR Master Cylinder Isolation Valve
4 Wheel Steer Mode Lamp	Exhaust Brake Cut	Low Trac Lamp
4WS Tow Mode Lamp	Exhaust Solenoid	Low Traction Lamp
ABS Active Lamp	Extended Ride Height Lamp	LR Apply Valve
ABS Active Lamp #1	Extended Ride Height Switch	LR Inlet
ABS Active Lamp #2	FL Inlet Valve	LR Inlet Valve Solenoid
ABS Indicator Lamp	FL Outlet Valve	LR Outlet
ABS Indicator Lamp #1	FR Inlet Valve	LR Outlet Valve Solenoid
ABS Indicator Lamp #2	FR Outlet Valve	LR Outlet/Pump
ABS Lamp	Front ISO	LR Release Valve
ABS Lamp Test	Front Prime	LR Solenoid Valve Test
ABS Motor	Fuel Pump Closed-Loop Correction Reset	LR Wheel Complete
ABS Relay	Fuel Pump Duty Cycle	Passenger Step
ABS Relay #1	Inflator Switch	Position Sensor EOL Calibration
ABS Relay #2	Inflator Switch Lamp	Precharge Bleed
ABS Relay Test	Learn Lateral Accelerometer	Pre-Charge Pump Motor Voltage
ABS Warning Lamp	Left Air Solenoid	Pressure Sensor Calibration
ABS Warning Lamp #1	Left Front Apply	Primary Isolation Valve
ABS Warning Lamp #2	Left Front Brake Apply	Primary Prime Valve
ABS/TCS Indicator Lamp	Left Front Dump Valve	Pump
ABS/TCS Valve Control Enable	Left Front Hold Solenoid	Pump Motor
Activate Desired Fuel Rail Pressure Contr	Left Front Hold Solenoid #1	Pump Motor Test
Antilock Lamp Test	Left Front Hold Solenoid #2	Pump Motor Voltage
Automated Bleed	Left Front Isolation Valve	Pump Prime Sequence
Bleed MPA	Left Front Release	Rear Apply
BPMV Relay Test	Left Front Release Solenoid	Rear Dump Valve
Brake Lamp	Left Front Release Solenoid #1	Rear ISO
Brake Lamp Test	Left Front Release Solenoid #2	Rear Isolation Valve
Brake Relay Test	Left Front Solenoid	Rear Prime
Calibrate Trim Height	Left Rear Brake Apply	Rear Release
Chassis Pitch Signal	Left Rear Dump Valve	Red Brake Lamp
Command 2 Wheel Steer	Left Rear Hold Solenoid	Red Brake Lamp #1
Command 4 Wheel Steer	Left Rear Hold Solenoid #1	Red Brake Lamp #2
Command 4WS Tow	Left Rear Hold Solenoid #2	Requested Torque
Command Rear Steer Left	Left Rear Isolation Valve	RF Apply Valve
Command Rear Steer Right	Left Rear Release Solenoid	RF Inlet
Compressor Test	Left Rear Release Solenoid #1	RF Inlet Valve Solenoid
Depressurize System	Left Rear Release Solenoid #2	RF Outlet
Driver Step	LF Apply Valve	RF Outlet Valve Solenoid
ESV1 RF LR Low Pressure Feed Valve	LF Inlet	RF Outlet/Pump
ESV1 RF RR Low Pressure Feed Valve	LF Inlet Valve Solenoid	RF Release Valve
ESV2 LF LR Low Pressure Feed Valve	LF Outlet	RF Solenoid Valve Test
ESV2 LF RR Low Pressure Feed Valve	LF Outlet Valve Solenoid	RF TCS Isolation Valve
EVO PWM	LF Outlet/Pump	RF TCS Prime Valve
EVO PWM #1	LF Release Valve	RF TCS Prime/Pump
EVO PWM #2	LF Solenoid Valve Test	RF Wheel Complete
EVO PWM #3	LF TCS Isolation Valve	RFLR Master Cylinder Isolation Valve
EVO PWM #4	LF TCS Prime Valve	Ride Control Lamp Test
EVO PWM #5	LF TCS Prime/Pump	Right Air Solenoid

Right Front Apply	TPM Option Enable
Right Front Brake Apply	Traction Engaged Message
Right Front Dump Valve	Traction Engaged Message #1
Right Front Hold Solenoid	Traction Engaged Message #2
Right Front Hold Solenoid #1	Traction Off Lamp
Right Front Hold Solenoid #2	Tuning Table Selection
Right Front Isolation Valve	VES Actuator Test
Right Front Release	VES Current
Right Front Release Solenoid	VES Slew Test #1
Right Front Release Solenoid #1	VES Slew Test #10
Right Front Release Solenoid #2	VES Slew Test #11
Right Front Solenoid	VES Slew Test #12
Right Rear Brake Apply	VES Slew Test #13
Right Rear Dump Valve	VES Slew Test #14
Right Rear Hold Solenoid	VES Slew Test #15
Right Rear Hold Solenoid #1	VES Slew Test #16
Right Rear Hold Solenoid #2	VES Slew Test #17
Right Rear Isolation Valve	VES Slew Test #18
Right Rear Release Solenoid	VES Slew Test #19
Right Rear Release Solenoid #1	VES Slew Test #2
Right Rear Release Solenoid #2	VES Slew Test #20
RL Inlet Valve	VES Slew Test #21
RL Outlet Valve	VES Slew Test #3
RR Apply Valve	VES Slew Test #4
RR Inlet	VES Slew Test #5
RR Inlet Valve	VES Slew Test #6
RR Inlet Valve Solenoid	VES Slew Test #7
RR Inlet Valve	VES Slew Test #8
RR Outlet	VES Slew Test #9
RR Outlet Valve	
RR Outlet Valve Solenoid	
RR Outlet/Pump	
RR Release Valve	
RR Solenoid Valve Test	
RR Wheel Complete	
Secondary Ckt. Evacuation	
Secondary Isolation Valve	
Secondary Prime Valve	
Self Test	
Sensor Learn Mode Enable	
Service Brake Soon Lamp	
Service Stability Sys. Msg.	
Stability Engaged Message	
Stability Reduced Message	
Steer Mode Lamp (All)	
System relay	
TCS Active Message	
TCS Indicator Lamp	
TCS Indicator Lamp #1	
TCS Indicator Lamp #2	
TCS Warning Lamp	
Torque Sensor EOL Calibrations	