

# Subaru Actuators

A/C Compressor Relay

AAI Solenoid Valve

ABS Sequence Control

All seat UNLOCK output

Alternator Control Control

ASV Solenoid Valve

Boost Pressure Control Solenoid

Boost Pressure Control Valve

BR Solenoid Valve

BR2 Solenoid Valve

Check Immobilizer System

CPC Solenoid Valve

CPC Solenoid Valve 2

EGR Solenoid Valve

EGR Valve Control

ELCM Pump

ELCM Switching Valve

Engine Speed Adjustment (A/C OFF)

Engine Speed Adjustment (A/C ON)

FICD Solenoid Valve

Fixed Idle Ignition Timing

Fuel Pressure Switching Solenoid

Fuel Pump Control (OFF Drive)

Fuel Pump Control (ON/OFF Drive)

Fuel Pump Relay

Fuel Tank Sensor Control Valve

High Pressure Fuel Inspection

Idle Speed adjustment (A/C OFF)

Idle Speed Adjustment (A/C ON)

Idle Speed Control

Ignition Advance Adjustment

Ignition Timing Advance

Indicator State

Injector Control (Injection Quantity Control)

Injector Control (Stop Mode)

Key locking output

Lighting indicator

lock actuat. LOCK output

PCV Solenoid Valve

Power Steering Lock

R gate/trunk UNLOCK output

Radiator Fan Relay

Secondary Air Conditioning bi-valve 1

Secondary Air Conditioning bi-valve 2

Secondary Air Pump Relay

Shift Lock Solenoid

Sub Fuel Pump Control (ON/OFF Drive)

Sub Fuel Pump Relay

Swirl Control Valve

Target EGR Valve Opening

Vent Control Solenoid Valve