

Subaru Powertrain Modules

Module	Module Name
ASS	Auto Start Stop
CC	Cruise Control
DCCD	Brake Vacuum Pump
Hybrid	Hybrid
Hybrid BC	Hybrid BCU
Hybrid M	Hybrid MCU
PCM	Powertrain Control Module
TCM	Transmission Control Module

Subaru Body Modules

Module	Module Name
AHL	Auto Leveler
AIU	Approach Information Unit (Hyb
AVN	AVN
BCM	Body Integrated Module
BCM	Wiper & Light Auto system
Eyesight	Eyesight
HVAC	Air Conditioner
HVAC	Air Conditioner (Hybrid)
IMPACT	Impact Sensor
Keyless	Keyless Access / Push Start
Meter	Meter
Navigation	Navigation / Monitor
ODS	Occupant Detection System
PRG	Power Rear Gate
PWM	Power Window
Rain	Rain Sensor
RLVD	Rear Left Vehicle Detection
RRVD	Rear Right Vehicle Detection
SPM	Seat Position Memory
SRS	Airbag
Ultrasonic	Ultrasonic Sensor

Subaru Chassis Modules

Module	Module Name
ABS	ABS
ABS	Anti Lock Brake System
EPB	EPB
EPS	Electric Power Steering
TPMS	Tire Pressure Monitoring System
VDC	VDC