

Subaru Actuators

A/C Compressor Relay
AAI Solenoid Valve
ABS Sequence Control
All seat UNLOCK output
Alternator Control Control
ASV Solenoid Valve
Boost Pressure Control Solenoid
Boost Pressure Control Valve
BR Solenoid Valve
BR2 Solenoid Valve
Check Immobilizer System
CPC Solenoid Valve
CPC Solenoid Valve 2
EGR Solenoid Valve
EGR Valve Control
ELCM Pump
ELCM Switching Valve
Engine Speed Adjustment (A/C OFF)
Engine Speed Adjustment (A/C ON)
FICD Solenoid Valve
Fixed Idle Ignition Timing
Fuel Pressure Switching Solenoid
Fuel Pump Control (OFF Drive)
Fuel Pump Control (ON/OFF Drive)
Fuel Pump Relay
Fuel Tank Sensor Control Valve
High Pressure Fuel Inspection
Idle Speed adjustment (A/C OFF)
Idle Speed Adjustment (A/C ON)
Idle Speed Control
Ignition Advance Adjustment
Ignition Timing Advance
Indicator State
Injector Control (Injection Quantity Control)
Injector Control (Stop Mode)
Key locking output
Lighting indicator
lock actuat. LOCK output
PCV Solenoid Valve
Power Steering Lock
R gate/trunk UNLOCK output
Radiator Fan Relay
Secondary Air Conditioning bi-valve 1
Secondary Air Conditioning bi-valve 2
Secondary Air Pump Relay
Shift Lock Solenoid
Sub Fuel Pump Control (ON/OFF Drive)

Sub Fuel Pump Relay
Swirl Control Valve
Target EGR Valve Opening
Vent Control Solenoid Valve